

## AV 1121

### Double inlet hose reel for double hose (foaming system)

Connection of the hoses



Insert a tail of 30 cm of "Rilsan" hose on 1/2" nipple (the rilsan hose have to be "included" inside the 1/2" hose).



Pass the "Rilsan" on the fixing system (that have to be previously dismantled) then fix it, still having a tail of 25 cm of "Rilsan" hose.




Connect the "Rilsan" hose on the quick connector



Connect the hose 1/2" fitting on nipple.



Connect the "water+chemical" 1/2" hose inlet on the 1/2" swivel joint.

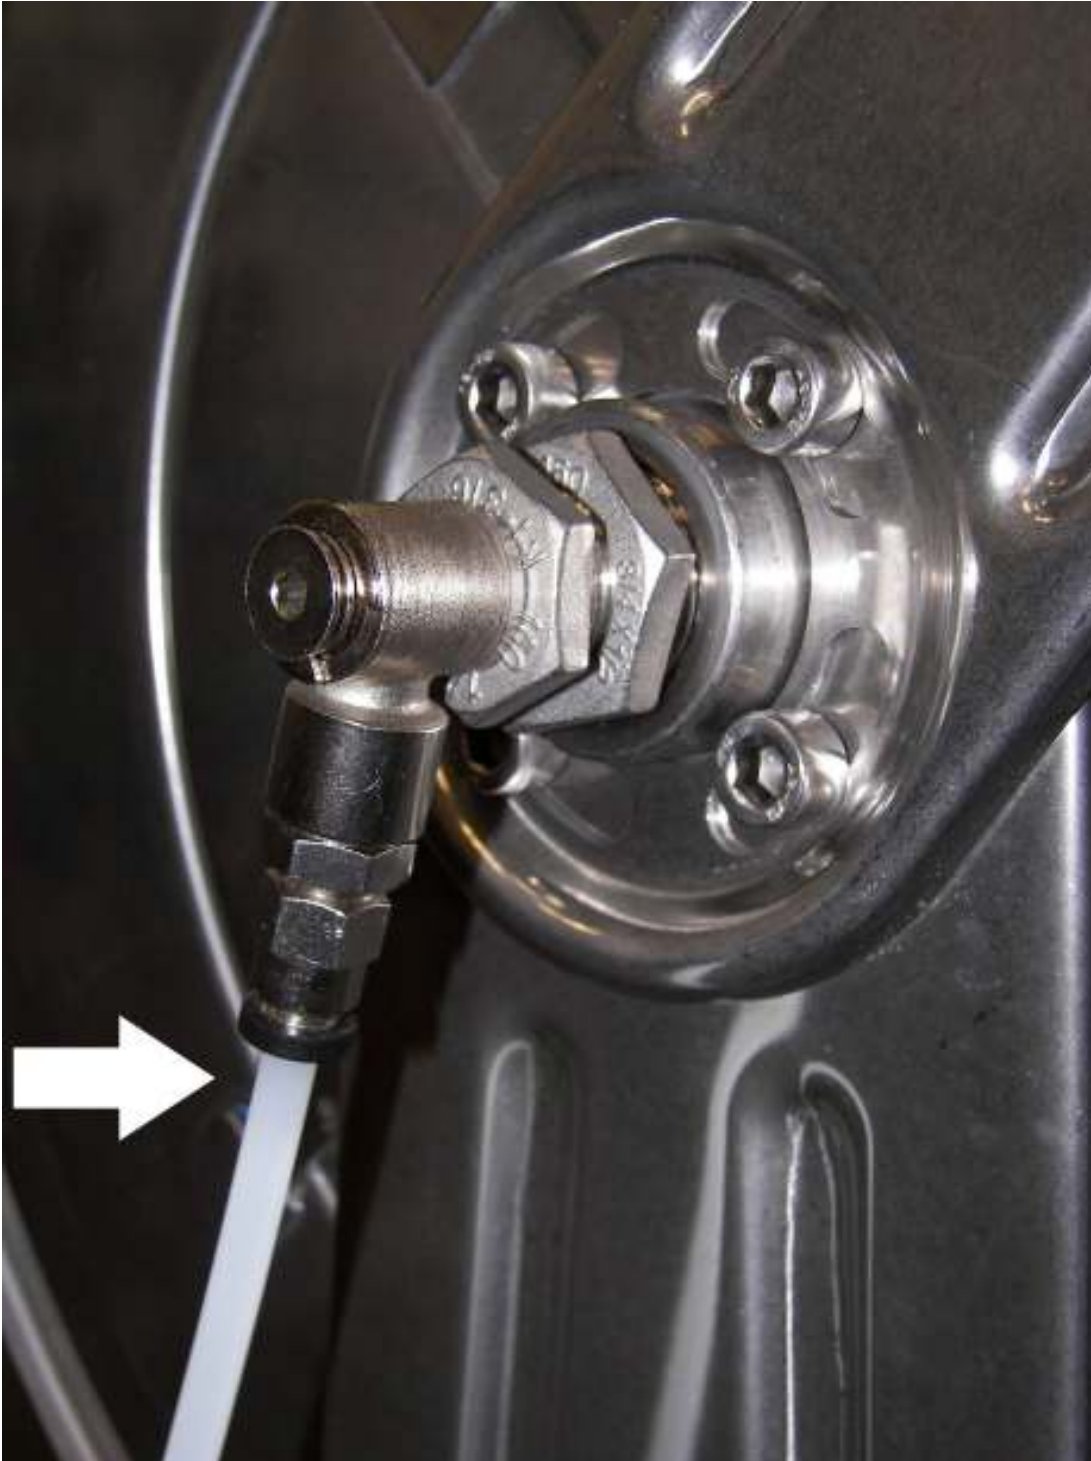

Connect the "AIR" hose (Rilsan) inlet on the quick connector for the ¼" swivel joint .



Fix the hose bumper as the standard hose reel.

The hose reel is ready to use.